


VOXORT

INSTALLATION MANUAL

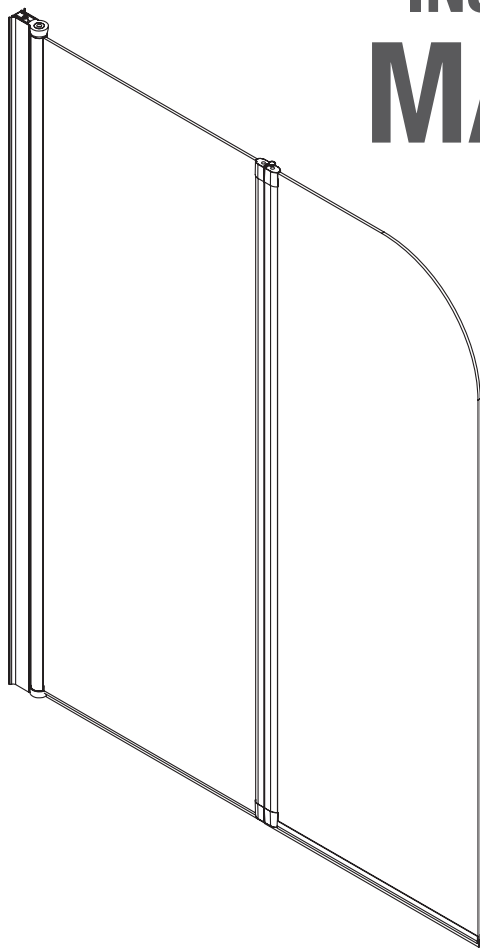

(HR) Upute za postavljanje tuš stranice za kadu


VOXORT

and water is so amazing

Before final assembly please note and check that final installation measure don't suit measure in name. Absolute sealing for all doors, side panels and shower enclosure is not possible. Low water resistance.

Before Installation

- ❶ Please read these installation instructions carefully before attempting to install the product. Check that none of the parts or fittings are missing and that nothing is damaged. If anything is missing or damaged, contact your place of purchase/retailer.
- ❷ Keep the glass away from hard objects when you transit and install it.
- ❸ Make sure there are no pipes or cables hidden in the wall where you intend to drill.
- ❹ Tools: Power Drill; 6,5 and 3 diameter Drill Bits; Philips screwdriver; Plain screwdriver; Spirit Level; Pencil; Plastic hammer; Tape measure; Silicone spray; Line hammer; Monkey wrench

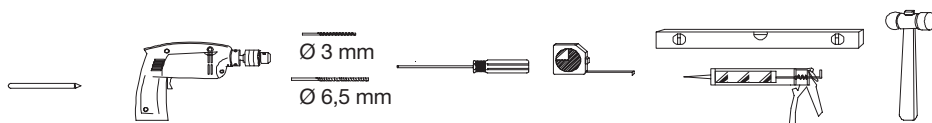

Contents


- 1 1 wall profile top cap
- 2 3 wall plugs
- 3 3 flat screws ST4x35
- 4 1 wall profile
- 5 1 bathscreen
- 6 3 screw caps
- 7 3 round screws ST4x35
- 8 3 screw washers

Below spare parts pre-mount to the bathscreen


- 9 2 bottom water seals
- 10 1 bottom pivot base
- 11 2 sunk screws ST4x50
- 12 1 top pivot base

VOXORT

and water is so amazing

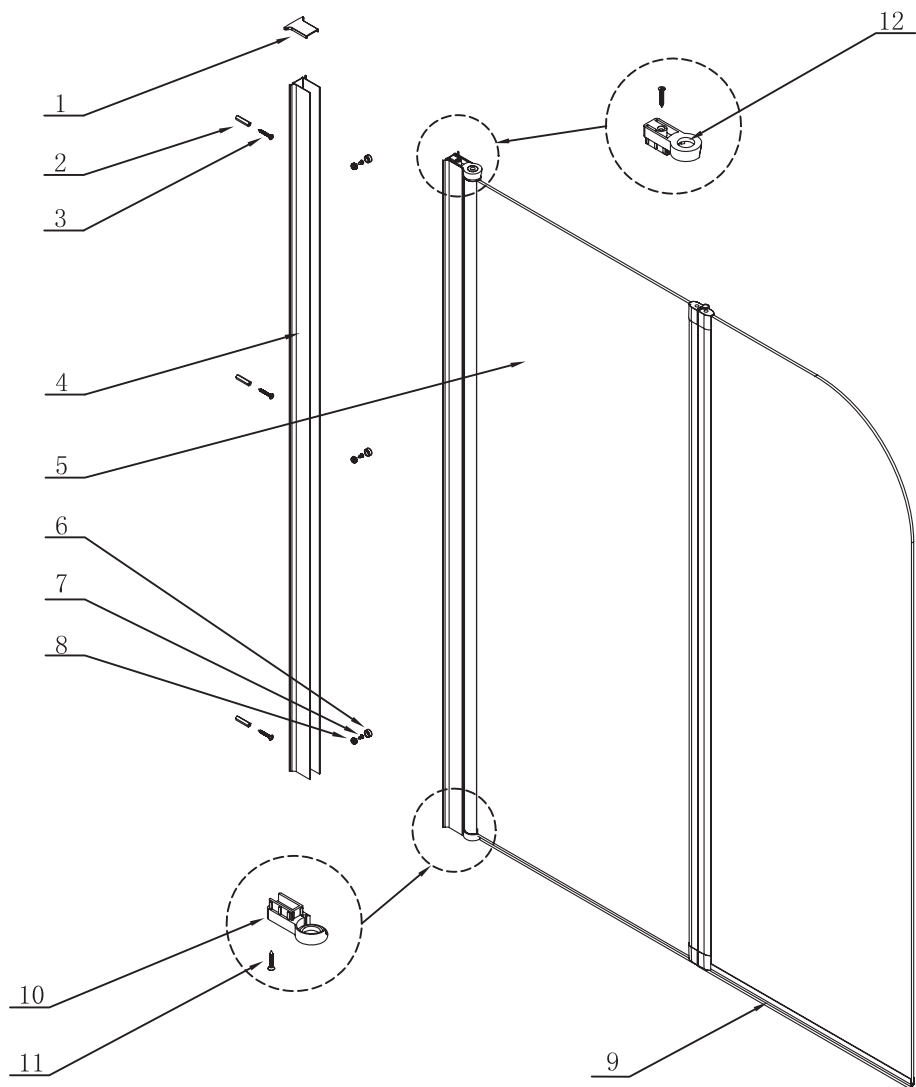

Installation

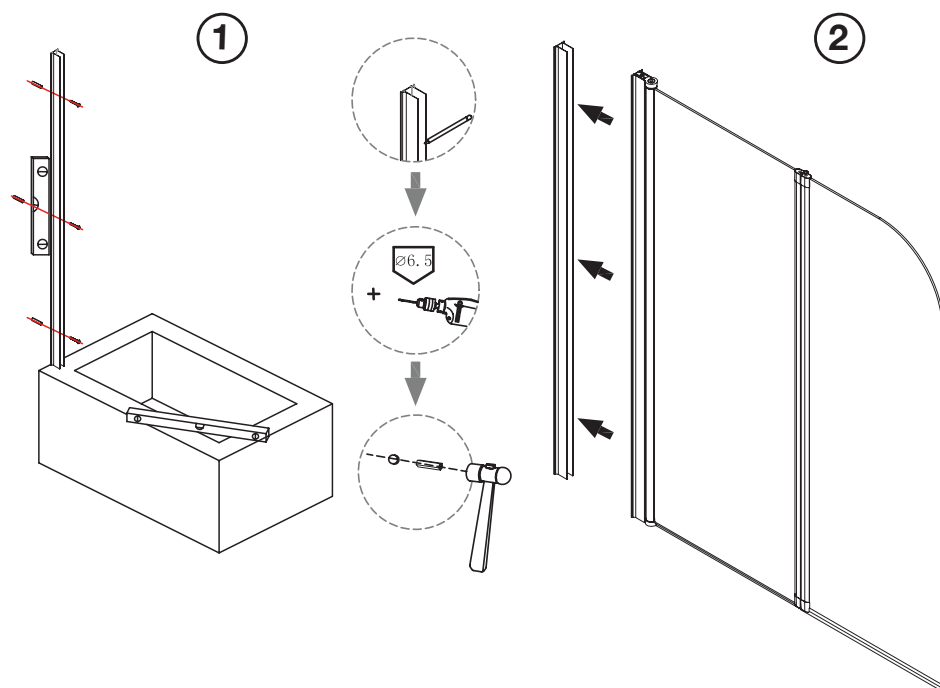


1 Make sure the bathtub is leveled, drill holes like in the picture 1 and put in the wall plugs (2).


2 Fixing the wall profile (4) to the installation position using the flat screws (3), make sure it's vertical, fit the moving panel (5) to the wall profile.

VOXORT

and water is so amazing

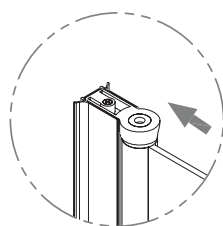


TOP

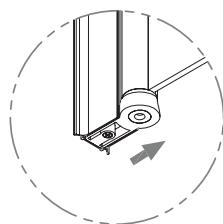


BOTTOM

3

3 Fitting the water seal (9) to the bottom of the moving panel. If the water seal causes the door moving not smoothly, you can adjust the connection profile and wall profile.

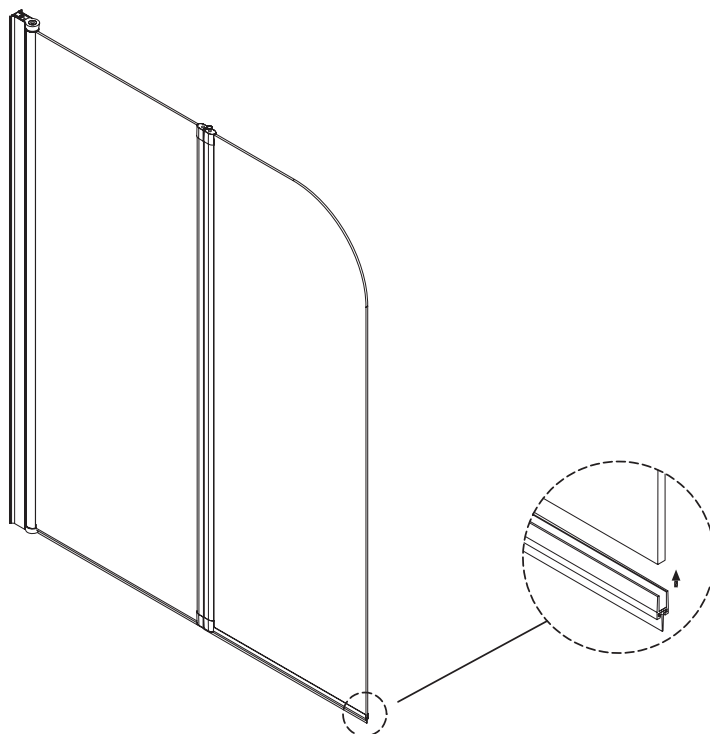

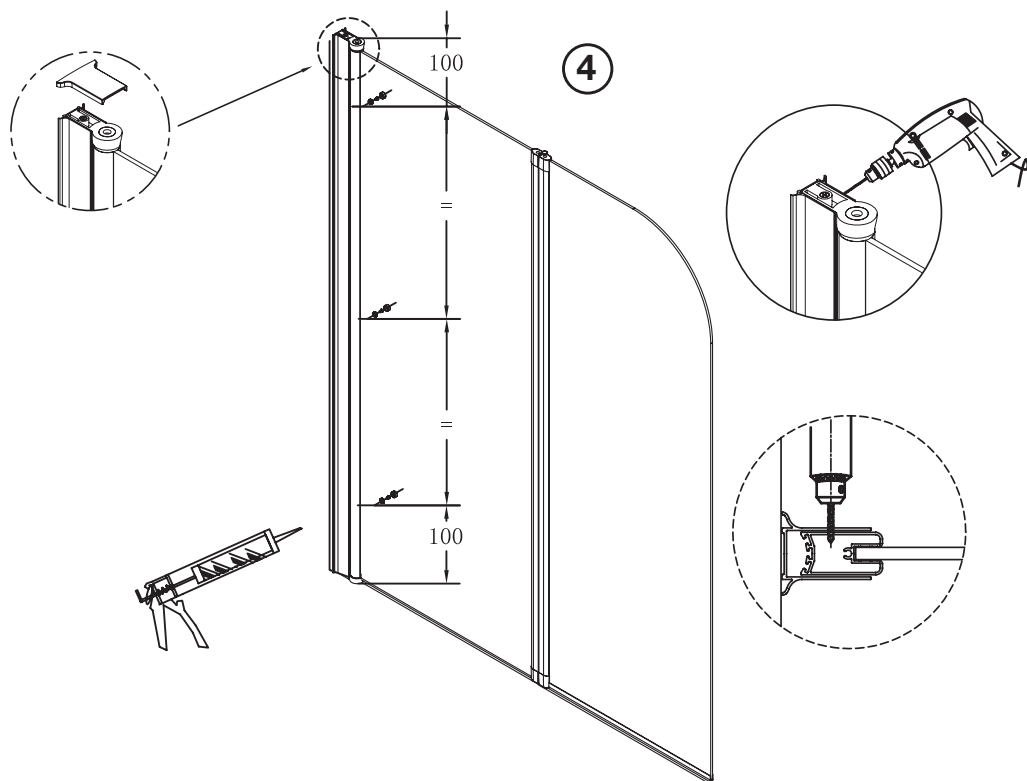


4 After adjusting, drill holes (diameter 3) at the place profiles meet inside the shower, fix the profile using round screw (7), washer (8), cover the caps (9), cover the caps (1) to the wall profile.

5 Apply silicone sealant on all external vertical and horizontal profiles that meet the wall outside the shower. You must not use the shower for 24 hours after the application of sealant.

VOXORT

and water is so amazing

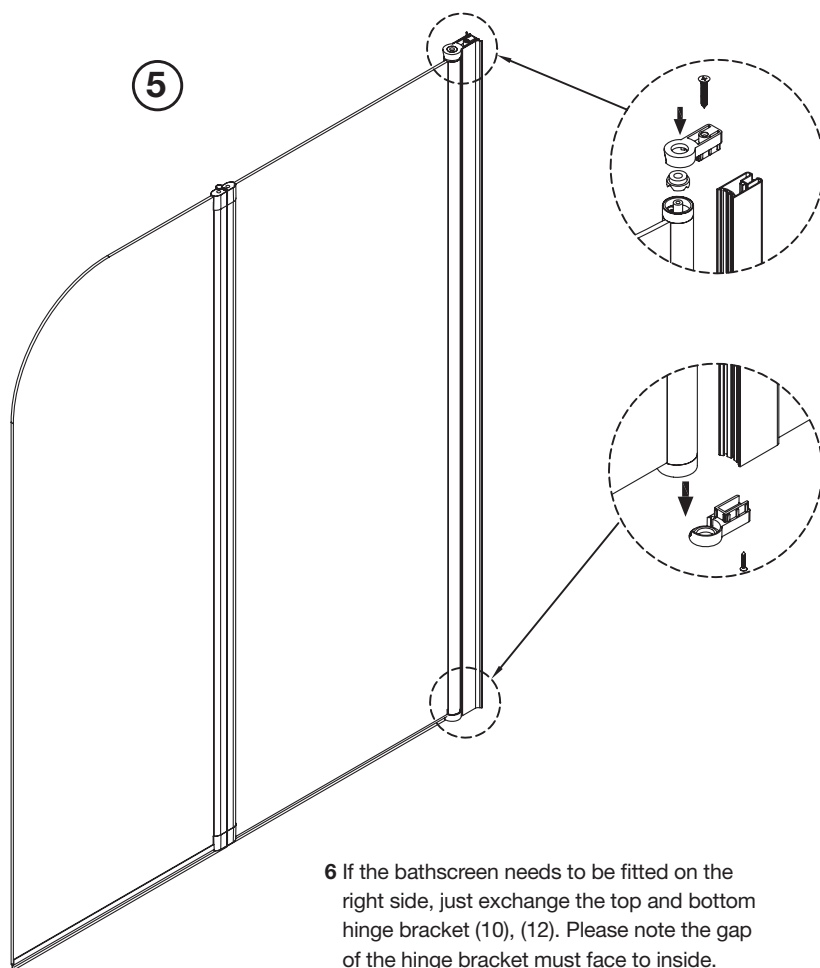



Cleaning and maintenance

Maintain and clean your cabin regularly to prevent limescale and closing problems. Clean the shower enclosure with a soft cloth and a mild detergent. Do not clean the cabin with aggressive agents such as alcohol, petrol or other chemicals. If the doors are creaking after the cabin is installed, you can put lubricant on the wheel roller, profile.




UPUTE ZA POSTAVLJANJE TUŠ STRANICE ZA KADU

**Prije ugradnje provjerite ugradne mjere
budući da se one uvijek razlikuju od
nazivnih. Apsolutno brtvljenje tuš kabina
i/ili vrata/stranica nije moguće.**

Minimalna vodonepropusnost.

Prije postavljanja:

- ❶ Pažljivo provjerite sadržaj pakiranja prije sastavljanja. Proizvođač neće snositi odgovornost za troškove ponovne ugradnje ili popravaka koji proizađu iz ugradnje oštećenog proizvoda.
- ❷ Pažljivo rukujte staklom. Iako je priloženo staklo vrlo čvrsto sigurnosno staklo (prema EN12150), udarci mogu uzrokovati oštećenja i na staklu i na okviru.
- ❸ Provjerite ima li cijevi ili kablova skrivenih u zidu na mjestima na kojima namjeravate bušiti.
- ❹ Potreban alat: električna bušilica; svrdla promjera 6.5 i 3; križni odvijač; obični odvijač; libela; olovka; plastični čekić; mjerna traka; silikonski sprej, precizni čekić, francuski ključ
- ❺ Potreban alat:

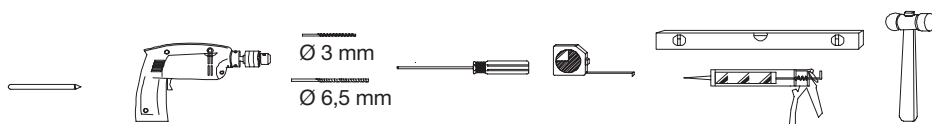


Sadržaj


- 1 1 gornji poklopac za zidni profil
- 2 3 zidne tiple
- 3 3 ravna vijka ST4x35
- 4 1 zidni profil
- 5 1 zaslon za kadu
- 6 3 kapice za vijke
- 7 3 okrugla vijka ST4x35
- 8 3 gumice za vijke

Donji dijelovi za postavljanje zaslona kade

- 9 1 donja vodonepropusna brtva
- 10 1 donje kružno ležište
- 11 2 udubljena vijka ST4x50
- 12 1 gornje kružno ležište

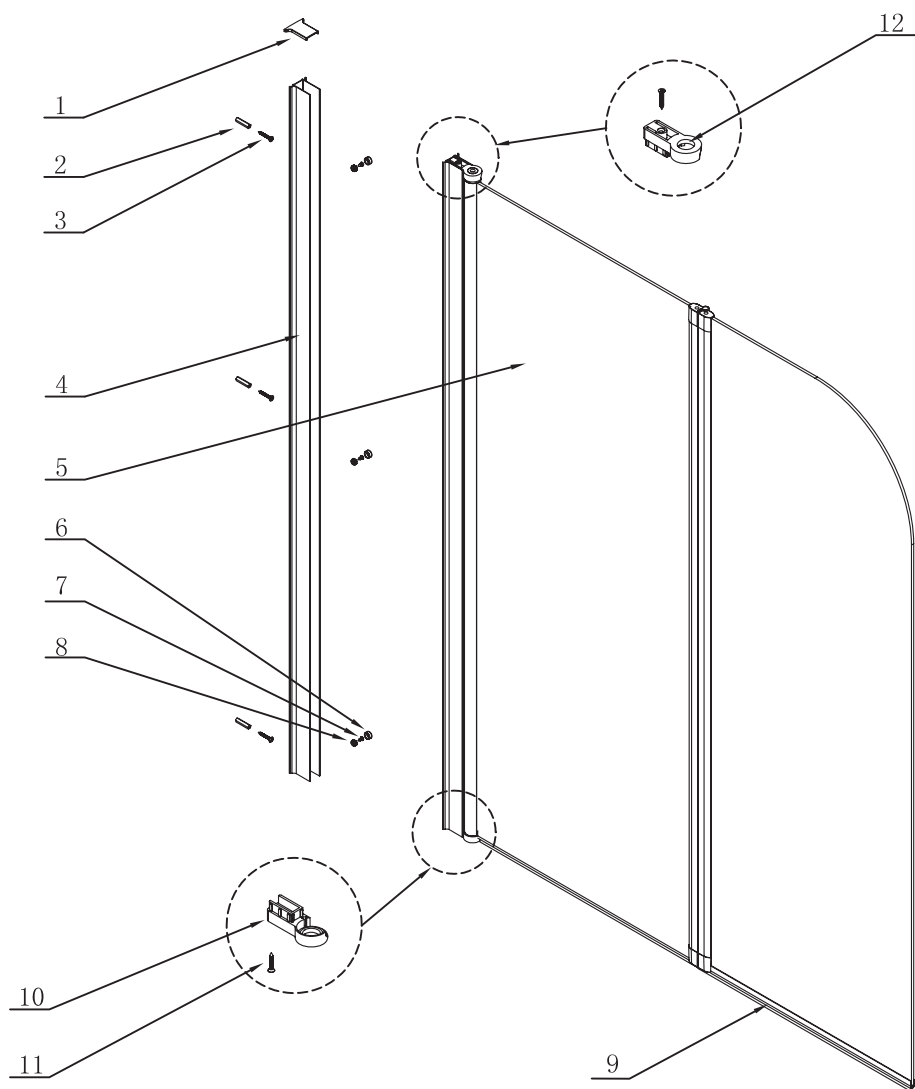


Instalacija

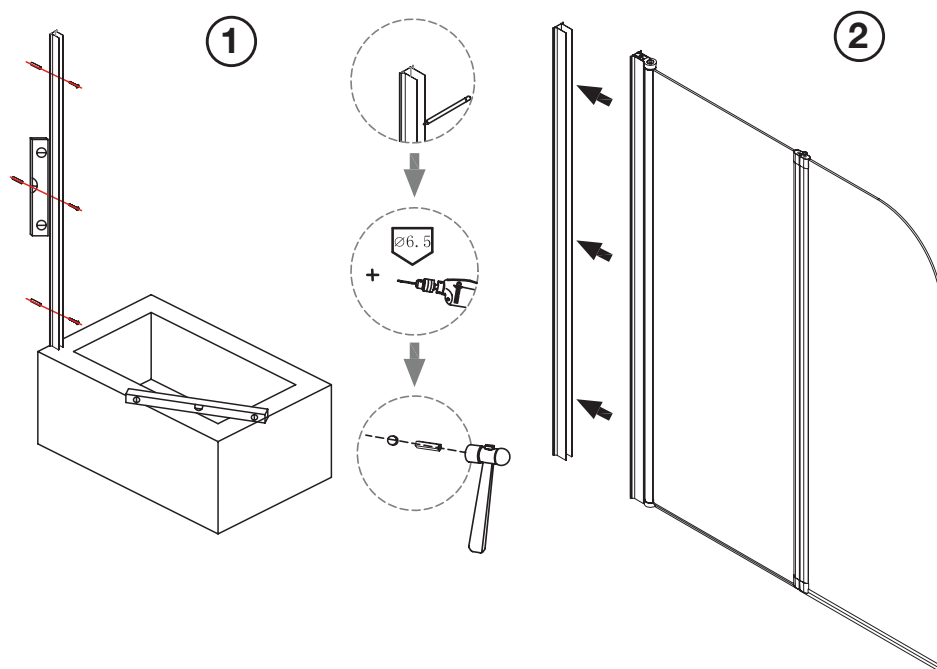


1 Provjerite je li kada nivelirana vodoravno, probušite rupe kao na slici 1 i zatim stavite zidne tiple (2).

2 Učvrstite zidni profil (4) u položaju za instalaciju koristeći ravne vijke (3). Provjerite je li vertikalni, namjestite pomičnu ploču (5) na zidni profile.

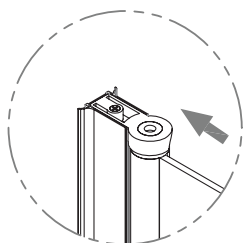


GORNJI DIO

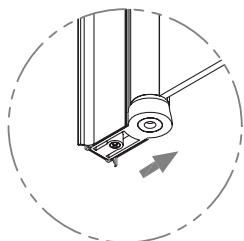


DONJI DIO

3


3 Namjestite donju vodonepropusnu birtvu (9) na donju stranu pokretne ploče. Ako se zbog vodonepropusne brtve vrata ne otvaraju s lakoćom, možete namjestiti profil za povezivanje i zidni profil.

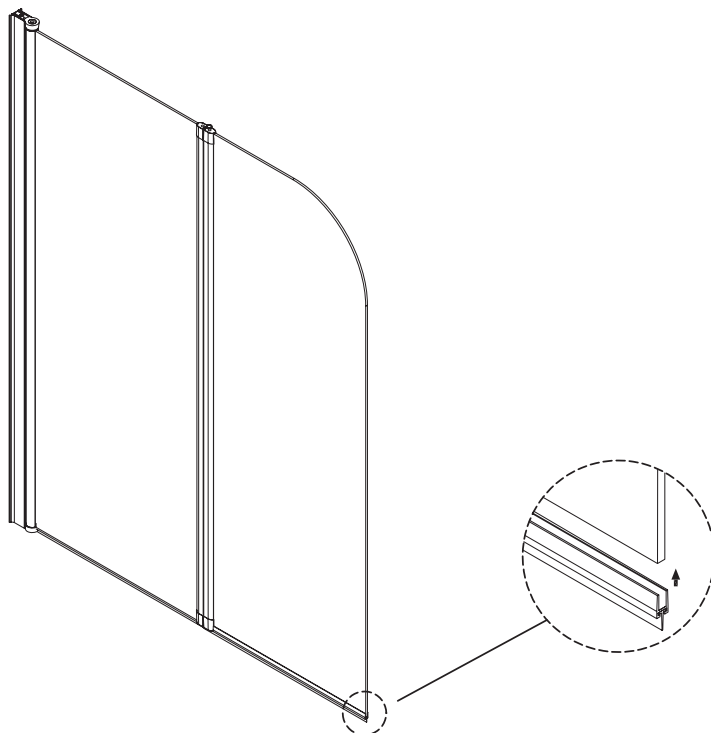

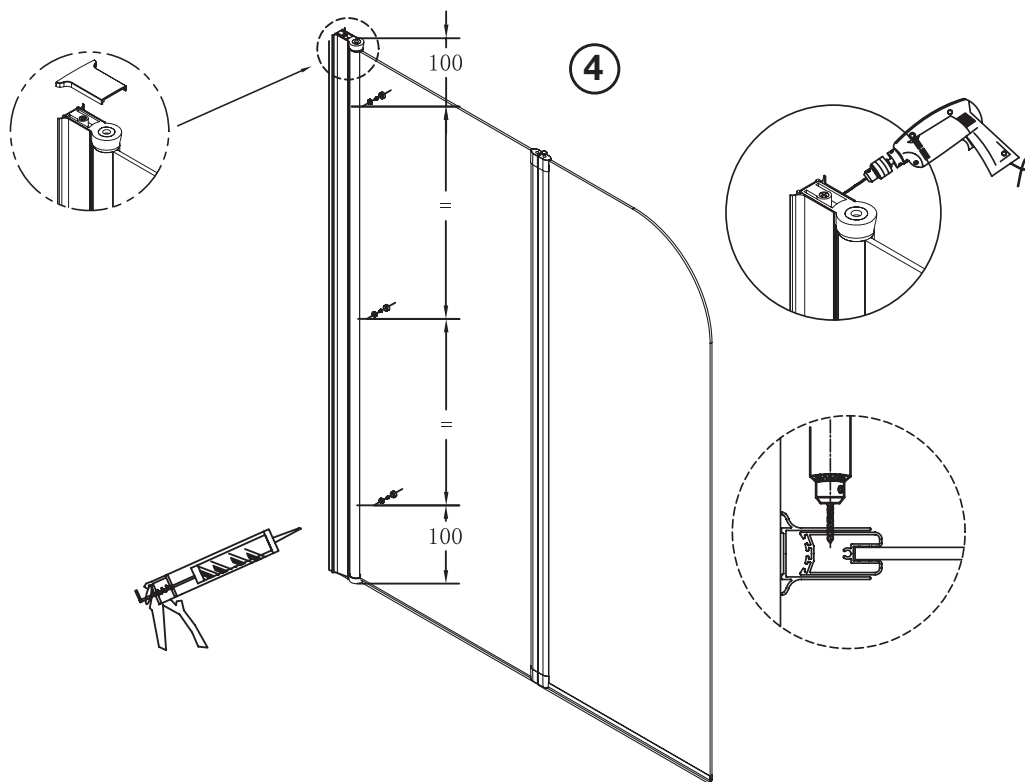

4 Nakon što završite s ovim prilagodbama, izbušite rupe promjera 3 mm na mjestu gdje se profili dodiruju unutar kabine, pričvrstite profile okruglim vijcima (7) i gubicama (8), te pokrite kapićama za vijke (6), na zidnom profilu (1).

5 Nanesite silikonsko brtvilo s vanjske strane svih vodoravnih i okomitih profila koji dodiruju zid. Ne smijete koristiti kabinu 24 sata nakon primjene brtvila..

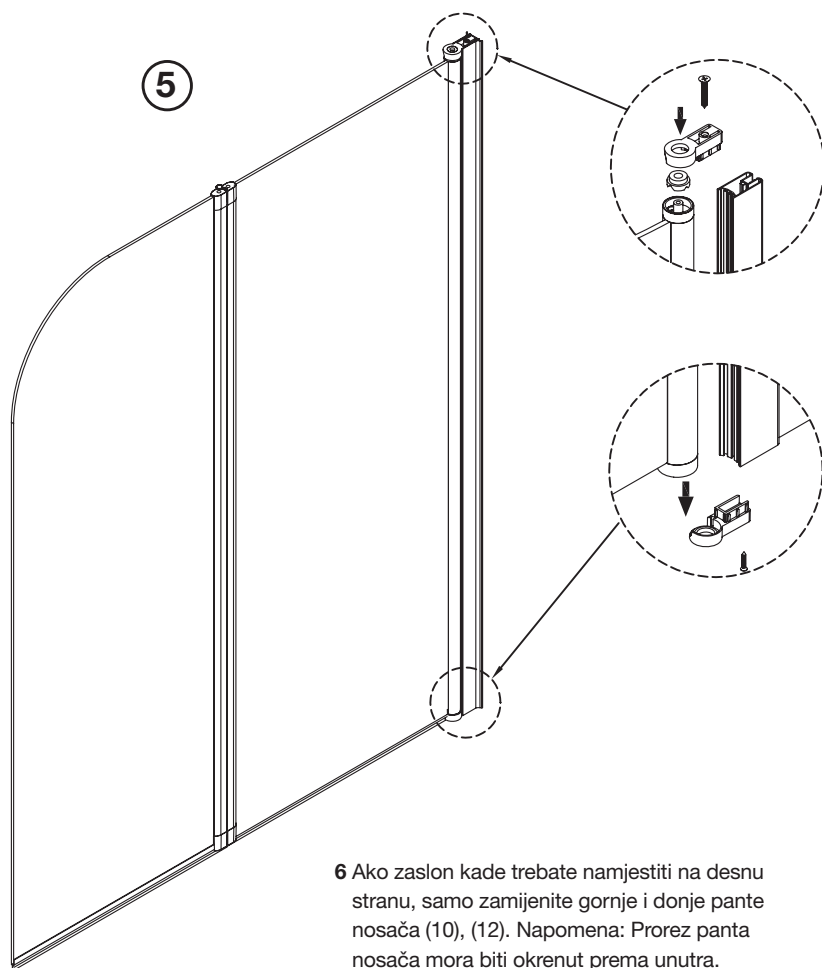

6 Ako zaslon kade trebate namjestiti na desnu stranu, samo zamijenite gornje i donje pante nosača (10), (12). Napomena: Prorez panta nosača mora biti okrenut prema unutra.

Čišćenje i održavanje

Održavajte i čistite svoju kabinu redovito kako bi spriječili nastanak kamenca i problema prilikom zatvaranja. Čišćenje tuš kabine vršite s mekom krpom i blagim deterdžentom. Kabinu ne čistite agresivnim sredstvima kao što su alkohol, benzin ili ostala kemijska sredstva. Nakon što je kabina postavljena ukoliko prilikom otvaranja/zatvaranja vrata škripe možete staviti sredstvo za podmazivanje na valjak kotača, profil.